

## REQUIREMENTS

- Pre-Hemmed Linen Napkin
- 2x Fusible Tear Away Stabilizer A (2" X 14")\*
- 2x Fusible Tear Away Stabilizer B (2" X 16")\*
- Bobbin to match Napkin
- Light Pink Topstitching thread
- Dark Pink Topstitching thread
- Janome Twin Needle (Part No. 820 828 008)
- Janome F Foot (Satin Stitch Foot)
- Quilting Guide Bar
- Quilting Ruler
- Erasable Fabric Marker

 
## Decorative Twin Needle Napkins




*\*These instructions will decorate one napkin.*

## INSTRUCTIONS

1. Following the manufactures instructions attach the fusible tear away stabilizer to the wrong side of the napkin.

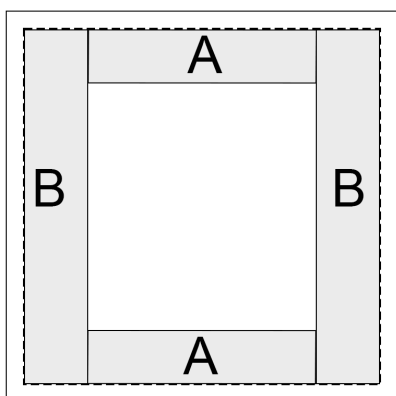

2. Using the quilting ruler measure in 1 ½ inches from the corner and mark with the erasable fabric marker.

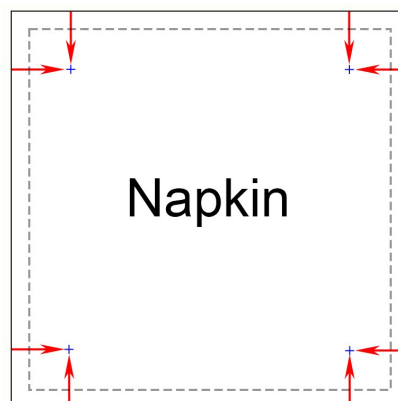

3. Attach the Satin Stitch Foot F. 
4. Insert the Janome Twin Needle.
5. Following the instruction booklet thread the machine with the two reels of thread and insert the bobbin.
6. Press the Twin Needle key . 

 
Twin Needle key is available on MC15000QM, SKYLINE S9, MC9850, CM7P, MC9450QCP, MC8200QCP, MC6700P, SKYLINE S7, SKYLINE S6, SKYLINE S3, 5300QDC, 4300QDC

**JANOME**  
Australia


7. Select Heirloom stitch 18.



*Patterns not suitable for twin needle sewing cannot be selected, these pattern selection keys are greyed out.*

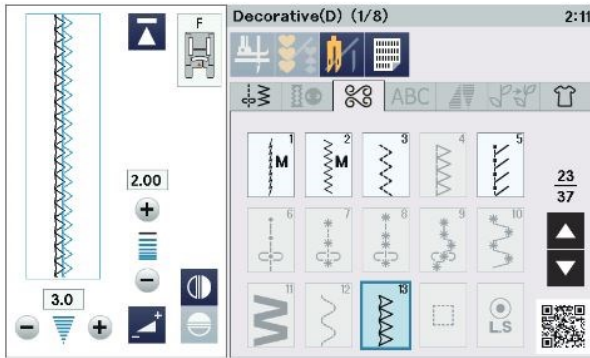


8. Attach the quilting guide and line up the needle drop position with the corner marking. Position the quilting guide bar with the edge of the napkin.

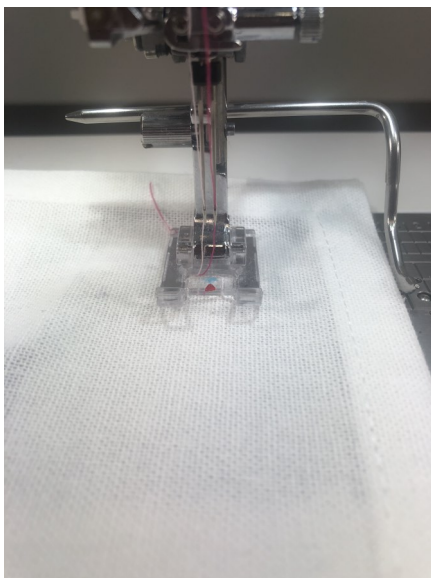

9. Stitch the decorative twin needle stitch from one point to the next. Lock off the stitch and cut the threads.

10. Line the needle drop position with the end of the previous stitched line and stitch down the second side of the napkin.
11. Continue working around all four sides of the napkin. Remove the stabilizer when completed.

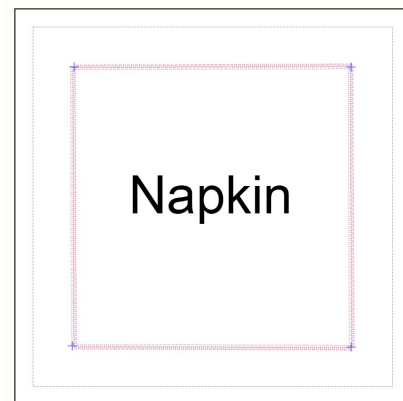

Finish.