

# JANOME

## Reusable Shopping Tote

### REQUIREMENTS

Matching Sewing Thread
Pins
Iron
O Foot
Dual Feed Foot - VD Single (Single)
Erasable Fabric Marker
Sewing Gauge
Button Shank Plate



QTY	SIZE	PRODUCTS
6inches	1/4 inch	Elastic
4	1 1/2 inch X 22 1/2 inch	Fabric (Handles)
1	17 1/2 inch X 34 inch	Fabric (Body)
2	1 1/2 inch X 22 1/2 inch	Iron on Interfacing



### INSTRUCTIONS

1. Following manufactures instructions attach the iron-on interfacing on to the wrong side of two handle strips.
2. Pin the other two handles strips to the right side of these to handle strips.



# JANOME


3. Attach the O Foot to the sewing machine and select Quilt Stitch 2.

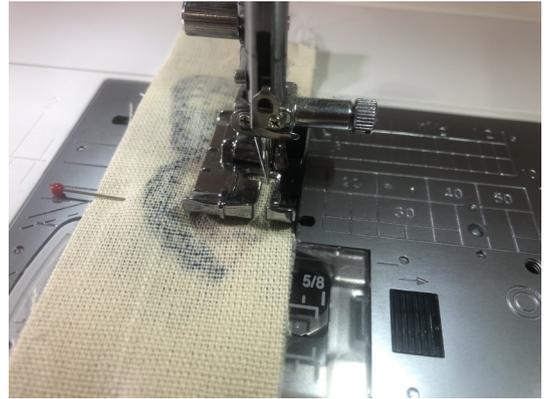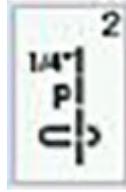

3. Stitch down both sides of the handles, leaving the ends open for turning.

5. Turn the handles out the correct way and press with the iron.

6. Attach the Dual Feet Foot (VD Foot) and engage the Dual Feed Key.

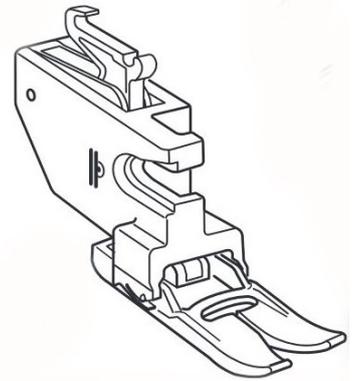

7. Move the needle position all the way to the right and adjust the length to 3mm.



8. Line the edge of the fabric up with edge of the needle gap on the foot and topstitch down both sides of the handle. Repeat this for both handles.

9. Set the handles a side for a moment.



# JANOME

9. Fold the body piece of fabric in half length ways with right sides together and pin the sides.
10. Stitch down the sides 1 cm (3/8") from the end.




11. Trim the seam back to 3mm (1/8") seam allowance.

Open the seams out and press with the iron.

12. Turn the fabric out the opposite way and press the side seams with an iron to create a neat edge.

13. Disengage the Dual Feed Key.

Attach the O foot to the machine and select Quilt Stitch 2.

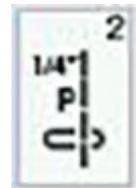

14. Stitch a 1/4 inch seam down both sides of the fabric encasing the raw edges inside.

15. From the left hand side measure in 3 inches from the edge and mark with an erasable fabric marker.

16. Measure in from the right hand side 3 inches and mark with the erasable fabric pen.

17. Match up the edge of the handle with the marks and pin into place.




# JANOME

29. Attach the Dual Feed Foot (VD Foot) and engage the Dual Feed Key.




18. Select stitch Utility Stitch 3.

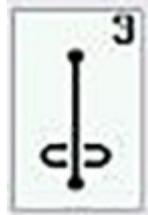

19. Place the Button Shank Plate at the edge of the handle and lower the foot.

20. Stitch across the handle, as the foot moves across the handle stop and raise the foot with the needle in the down position.

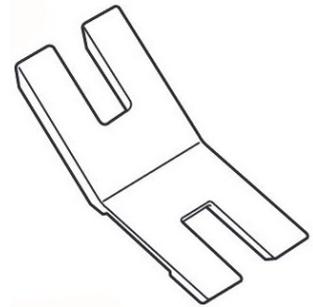

21. Remove the Button Shank Plate, lower the foot and continue stitching to the edge of the handle.

22. Stitch the opposite end of the handle down the same way.

23. Attach the second handle in the same way.

24. Using the Sewing Gauge and the erasable fabric marker. Mark around the top 1/2" down from the raw edge.



25. Fold the raw edge over at the marked points, pin and press with the iron.

26. Fold the edge over again, encasing the raw edge inside, pin and press with the iron.

27. Find the centre point between the handles on one side.

# JANOME

28. Fold the elastic in half and push the ends into the folded fabric.

30. Select Utility Stitch 2 and move the needle over to the left needle position. Adjust the length to 3mm.



31. Line up the edge of the foot with the edge of the folded fabric and stitch around the edge.



When you reach the handles stop with the needle in the down position.

Lift the foot and place the Button Shank Plate at the edge of the handle and lower the foot.

Stitch across the handle as the foot moves across the handle stop and raise the foot with the needle in the down position.

Remove the Button Shank Plate lower the foot and continue stitching to the edge of the handle.

32. Continue around the edge into you are back at the beginning.

Turn the bag in the correct way.



33. Move the needle to the far right needle position and stitch around the opening of the bag in the same way.

This will create two lines of topstitch on the folded opening of the bag.