

# Dog Bed



## Requirements

Janome Sewing Machine (*DC6050 used for project*)

Zig Zag Foot A

Janome Purple Tip Needle

Janome plastic bobbin

Dressmaking scissors

Dressmaking pins

Sewing thread to match fabric

Cushion insert #24 (61cm x 61cm)

Hand sewing needle (optional)

Ironing Board & Iron

## Fabric

64cm x 64cm striped waterproof canvas fabric (front)

25cm x 13cm striped waterproof canvas fabric (handle)


64cm x 64cm plain minky polar fleece (back)

## **Step 1**

### *Creating the handle*

Take the handle fabric and press in half on the length.

Fold into the pressed centre line each long edge.

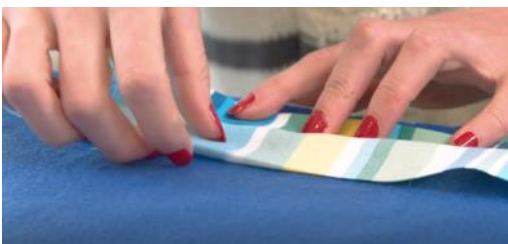

Then, fold in half again, matching the strips and the raw edges are in the centre fold. Now, pin.



## **Step 2**

Select a triple straight stitch on your machine


Width: 7.0 Length: 4.0

Line-up the right edge of the zig zag foot with the edge of the handle and stitch down each side.



## **Step 3**

Place the front and back fabric pieces right-sides together and pin together.

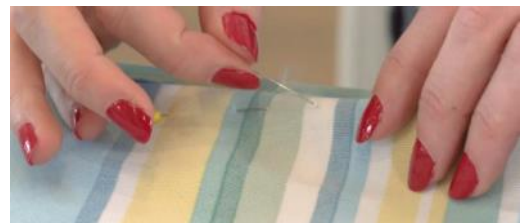

## **Step 4**

On one side of the pinned fabrics, measure 20cm in from each corner and pin the handle on the inside of the 2 pinned fabrics.




# Dog Bed



## Step 5

Using a straight stitch, sew a 2.5cm seam around 3 sides.

On the 4th side left an opening to turn through.

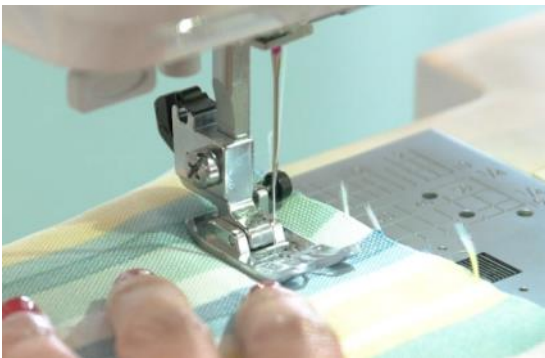

*TIP: At each corner stop, pivot 45°, sew 3 stitches. Stop and pivot 45°, then continue stitching seam.*




## Step 6

Trim off excess fabric on corners.

Turn through to right-side and push out corners.

*Tip: Use a chopstick to push out corners.*

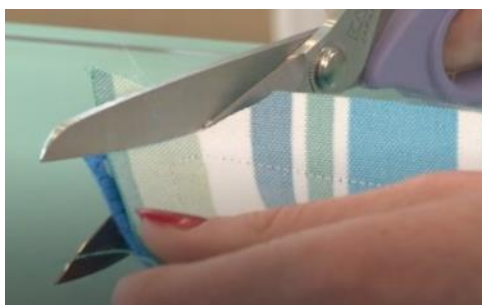

## Step 7

Place the cushion insert into the cover.

Pin the opening.

You can stitch seam by machine using a straight stitch or hand stitch.



## FINISH

